PRODUCT DATA SHEET

Open Channel

Ultrasonic Flowmeter

UFH-100






1. Outline



- 1) The UFH-100 flowmeter measures free surface flows of such fluids as supply water, agricultural water, river water, wastewater, process water, and industrial effluents. Flowmeters generally calculate flow by taking the product of average flow velocity and the flow cross-sectional area. The UFH-100 flowmeter system however employs an ultrasonic flow rate meter to determine flow velocity and a level gauge to measure fluid level and computes flow based on signals from these instruments. (Ultrasonic or external level gauges may be used for level measurement.)
- 2) The UFH-100 flowmeter can measure flows for water levels from zero to full. The flow detection unit is small, easy to install, and does not retain flow.
- 3) The UFH-100 flowmeter provides outputs for flow velocity and water level in addition to flow rate and totalized flow. Measurement is possible in both the forward and reverse flow directions.

2. Configuration

Ultrasonic flowmeter for open channels Standard configuration schematic (e.g., 1 path measurement)

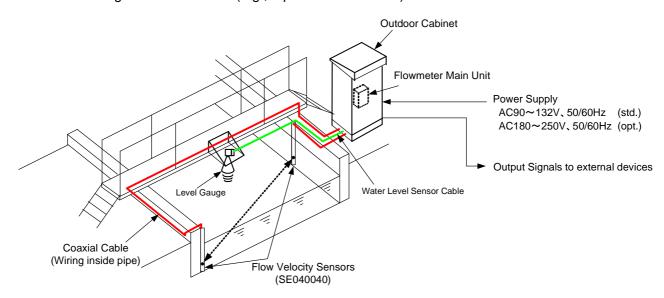

- * Level gauge used can be ultrasonic or other external 2-wire type water level gauge.
- * Level gauge cable may differ according to specifications of the level gauge used.

Item	Nomenclature	Model	Qty	Remarks,
1	Flow velocity transducer	SE040040	1 set (2 pcs)	Submerged channel installation with accessory mounting fixtures. Ultrasonic pulses are transmitted and received below the water line.
2	Coaxial cable	5C-2WAE	2 pcs	Connects flow velocity transducer and main unit (less than 300m).
3	Cable junction material (Scotch-Cast)	JB-102	2 pcs	Used to joint flow velocity transducer cable and main unit extension cable. Junction box (JB-101) may also be used.
4	Level gauge		1 pc	Installed above water surface. Any 2-wire level gauge may be used with system.
5	Level gauge cable			Twisted pair cable (KPEES) recommended. If ultrasonic level gauge is used, cables should be complex cable (max. 150m).
6	Main unit	UFH-100	1 pc	Receives signals from flow velocity transducer and level gauge and calculates flow rate, provides a display, and generates a variety of signal outputs.

3. Calculation of flow rate

1) Flow rate 'Q' through the open channel is the product of average flow velocity ' V_a ' and the flow cross-sectional area 'A'.

$$Q = A \cdot V_a$$

Cross section 'A' will be calculated with dimension of channel and its water level 'H'. Average velocity ' V_a ' of cross section will be calculated with measured average flow velocity of the path ' V_l ' and the correction coefficient ' K_l ' of the path.

$$Q = A(H) \times K_1(H) \times V_1$$


'H' will be measured by level sensor. Then cross section 'A' and also correction coefficient ' $K_{l'}$ will be calculated through function generator. Flow rate 'Q' will be calculated by measured flow velocity of the path and them.

In fluid channels where there is flow velocity turbulence, multiple path measurement (2 - 4 measurement paths) is employed. In such case, flow velocity would be the average of each of the measured path flow velocities, V_a would take into consideration multiple measurement paths.

$$\overline{V}_{a} = \frac{1}{N} \sum_{i=1}^{N} V_{a}(i)$$

$$= \frac{1}{N} \sum_{i=1}^{N} K_{I}(i, H) \times V_{I}(i)$$

Flow velocity measurements cannot be made if water level falls below the lowest sensor height, and flow rate would be calculated in accordance with the Manning formula.

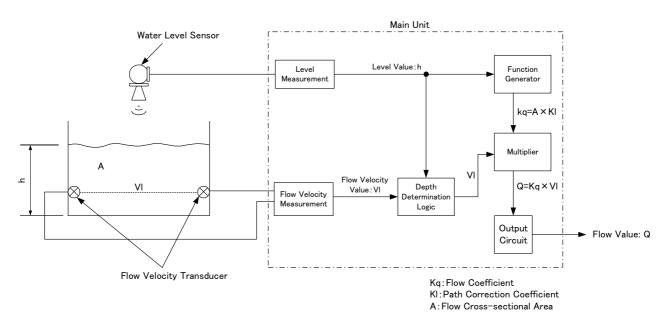

Open Channel Ultrasonic Flowmeter - Block Diagram

4. General Specifications

1. Overall specifications

•	Application	Free surface flows such as agricultural water, river water, waste water, process water, industrial effluents, etc.		
	Fluid temperature	0 ~ 40°C		
	Turbidity	Less than SS10,000mg/L		
Measurement	Other	Consult manufacturer in the following cases: Large amount of bubbles or debris on fluid surface Very choppy fluid surface Large amount of bubbles or debris in fluid Drifting, solid, heavy objects such as wood Sediment accumulation in water channel		
	Channel profiles	Rectangular, circular, trapezoidal, horseshoe, etc.		
Applicable Water Channel	Dimensions	Channel width : 0.3m \sim 20m Circular water channel: ϕ 0.3m \sim 5m		
Ondrino	Required straight channel length	See Table 5		
	Flow rate	0 ~ full water level flow		
Measurement	Water level	0m ~ 10m		
Range	Flow velocity	Forward flow: 0m \sim 10m/s Reverse flow: consult manufacturer		
Data update :	: approx. 100ms			
Measurement Accuracy	Flow rate	Forward flow: ±3% FS (*1) Limited to natural flows (however max. flow limited by channel profile, max. level, max. flow velocity, etc.) Reverse flow: consult manufacturer		
•	Water level	Depends on level gauge used. (+/- 10mm or better accuracy for level gauge required.)		
	Flow velocity	±1%RD (*2) (for flow velocity above 0.8m/s) ±8 mm/s (for flow velocity less than 0.8 m/s)		
	Flow rate	Flow velocity level calculation method		
Measurement method	Water level	Depends on level gauge used.		
	Flow velocity	Ultrasonic pulse transit time difference method		

*1) FS: full-scale *2) RD: reading value

2. Main unit specifications

Main unit configuration	Flow velocity measurement and flow calculation sections are integrated into one unit. Level measurement unit - depends on level gauge used			
	Input	Water level analog signal from level gauge		
Water level analog input	Specifications of connecting components	 Two-wire level gauge which operates on DC24±20% Level gauge with 4~20 mA current input, 300Ωload resistance 		
(A-IN)	Input signal	4-20mA DC current input (insulated) (max 30mA)		
	Input terminal	Terminal board (M4)		
	Output	Flow rate		
Class sate	Output signal	$4\sim20$ mA DC current output (insulated) Allowable load resistance: less than 750Ω		
Flow rate	Response speed	10~120 sec (90% response time)		
analog output (Q-OUT)	Output pattern	See Output Profile, Chap. 6 "-max. flow" = "max. flow" Forward flow/reverse flow direction directionality by relay output (QBW)		
	Output terminal	Terminal board (M4)		
	Output	Level		
Level analog output	Output signal	4~20mA DC current output (insulated) Allowable load resistance: less than 750Ω		
(H-OUT)	Output pattern	See Output Profile Chap. 6		
	Output	Flow velocity		
Flow velocity	Output signal	4~20mA DC current output (insulated) Allowable load resistance: less than 750Ω		
analog output (V-OUT)	Output pattern	See Output Profile Chap. 6 "-max. flow velocity" = "max. flow velocity" Forward flow/reverse flow directionality by contact point output (QBW)		
	Output	Totalized pulse (contact point close time: approx. 100ms)		
	Output signal	Power PhotoMOS relay (insulated)		
Totalizer output	Contact point capacity	AC 3~250V DC 3~125V 0.6A (Derating necessary above 40°C, 0.4A@60°C)		
(INTG)	Totalized direction	Forward flow/reverse flow independent output Common setting for forward flow/reverse flow		
	Totalized units	1000m³, 100m³, 10m³, 1m³, 0.1m³, 0.01m³, 0.001m³		
	Output terminal	Terminal board (M4)		
	Output	Warning (during warning: closed) when values beyond specified water level range are acquired		
Water level anomaly	Output signal	Power PhotoMOS relay (insulated)		
warning output (HERR)	Contact point capacity	AC 3~250V DC 3~125V 0.6A (Derating necessary over 40°C, 0.4A@60°C)		
	Output terminal	Terminal board (M4)		
	Output	Warning (during warning: closed) when values beyond specified flow velocity range are acquired		
Flow velocity	Output signal	Power PhotoMOS relay (insulated)		
anomaly warning output	Contact point capacity	AC 3~250V DC 3~125V		
(VERR)	Output torminal	0.6A (Derating necessary over 40°C, 0.4A@60°C)		
	Output terminal	Terminal board (M4)		


	Output	Forward flow and reverse flow detection	
		(Forward flow: open, reverse flow: closed)	
Directionality	Output signal	Power PhotoMOS relay (insulated)	
,		AC 3~250V	
output (QBW)		DC 3~125V	
		0.6A (Derating necessary over 40°C, 0.4A`60°C)	
		Terminal board (M4)	
Multi noth flour valocity	2 Path measurements	External measurement path switching unit not necessary	
Multi-path flow velocity measurement	3 Path measurements 4 Path measurements	External measurement path switching unit necessary (optional)	
measurement			

	I	T_		
		Flow computation and flow velocity measurement units: interactive 16 keys and		
Data settings	Setting method	display		
Data cottingo		Level measurement unit: depends on level gauge used.		
	Settings	Various settings such as analog output, etc.		
	Display	With backlight, 16 digit × 16 line LCD display unit		
	Display content	Measurement data - flow data, measurement units, various operational		
		displays, etc.		
		Flow rate: dependant on max. flow value setting		
Display		(max 6 digits, including comma, decimal point)		
	Diamles dicite	Level: dependant on max. level setting		
	Display digits	Flow velocity: dependant on max. flow velocity setting		
		(max. 6 digits, including comma, decimal point)		
		Totalized value: 6 digits		
	Flow	Displays "flow units" (minus, "-", display for reverse flow)		
	Totalizer	"INTG" displayed during totalizing operation		
	AGC	If AGC is set at ON during flow velocity measurement, "VAGC" is displayed, if		
		during warning, "wAGC" is displayed		
	Anomalous value	"VDIS" displayed when anomalous data is deleted during flow velocity		
	deletion	measurement		
	Rapid change	"QCHG" displayed when rapid change of flow rate is detected during flow		
		velocity measurement		
	No receiving echo	"VROFF" displayed during flow velocity measurement processing without		
		receiving echo		
One retien status				
		"HROFF" displayed during level measuring processing without receiving echo		
display	Wire breakage, failure, etc.	"VHALT" displayed when flow velocity values fall below 0% during		
		measurement		
		"HHALT" displayed when level values fall below 0% during measurement		
	Checks	"CHK-Q" displayed during analog output check of flow rate		
		"CGK-V" displayed during analog output check of flow velocity		
		"CHK-H" displayed during analog output check of level		
		"CHK-M" displayed during switching of measurement path		
		"CHK-QVHM" displayed during multiple checks		
	Over full-scale			
	Low Battery warning	"LB" displayed when back-up battery voltage falls below prescribed value.		
Operation status display	etc. Checks	measurement "HHALT" displayed when level values fall below 0% during measurement "CHK-Q" displayed during analog output check of flow rate "CGK-V" displayed during analog output check of flow velocity "CHK-H" displayed during analog output check of level "CHK-M" displayed during switching of measurement path "CHK-QVHM" displayed during multiple checks "FS" displayed when individual measurement data analog outputs exceed displayable range		

	Processing for no receiving echo Applicable time for no receiving echo processing	Data prior to loss of receiving echo from level gauge and flowmeter is retained. Selectable flow output –within "0%", "100%", or "HOLD (retain prior data)" Level measurement; HOLD (retain prior data) when receiving echo is lost Velocity measurement; HOLD (retain prior data) when receiving echo is lost Flowmeter measurement: 15s Level gauge: dependant on level gauge
	Self-diagnostics	Self-check routine runs when power is turned on or from check menu
	Analog output check function	Analog check current outputs possible Setting range: Flow rate, flow velocity; -100.0 - 100.0% of span (to max. 1 decimal point) Level; 0.0 - 100.0% of span (to max. 1 decimal point)
	Low flow rate 'cut'	Flow rates less than specified values are rejected (individual setting of forward flow/reverse flow possible) Setting range: Forward flow; 0.0000-9.9999 [flow setting units] (max. 4 decimal places) Reverse flow; -99999 - 0.0000 [flow setting units] (max. 4 decimal places)
	Flow rate span correction	Span compensation possible (individual setting for forward flow/reverse flow). Setting range: 0.100 - 2.000 (max. 3 decimal places)
	Flow rate zero correction 'Cut' of Pool water Deletion of anomalous data Flow velocity automatic gain setting function Flow velocity automatic gain control function Basic data display function Measurement path switching check function Low flow velocity 'cut' Flow velocity zero correction	Flow zero offset compensation possible (individual setting for forward flow/reverse flows) Setting range: -99999 – 999999 [flow setting units] (max. 4 decimal places)
Functions		Set level of Pool water. Flow is zero if level falls below setting. Setting range: 0.000 - 10.000m (max. 3 decimal places)
		Deletes transient data distortions caused by air bubbles, particles, etc. during flow velocity measurement.
		Automatic gain setting for flow velocity measurement. Manual setting with oscilloscope to confirm wave profiles also possible
		Automatic gain control to maintain fixed level relative to fluctuations in receiver sensitivity during measurement Note: not designed to respond to flow rate fluctuations
		Display of measured or calculated data possible
		In cases of multiple measurement paths, forcibly fixes measurement path and allows measurement checks of each path.
		Rejects flow velocity data below specified values (separate settings for forward flow/reverse flow) Setting range: Forward flow direction: 0.00 - 10.00m/s (max. 2 decimal places) Reverse flow direction: -10.00 - 0.00 m/s (max. 2 decimal places)
		Zero offset compensation possible only for specified flow velocity (separate settings for forward flow/reverse flow) Setting range: -10.00 - 10.00 m/s (max. 2 decimal places)
	Flow velocity span correction	Span compensation possible (individual setting for forward flow/reverse flow). Setting range: 0.100 - 2.000 (max. 3 decimal places)


	Zero level correction	Zero offset compensation possible only for specified level		
	Zelo level collection	Setting range: -9.999 - 10.000m (max. 3 decimal places)		
	Level span correction	Span compensation possible		
	Level spair correction	Setting range: 0.100 - 2.000 (max. 3 decimal places)		
Power	AC 90-132V (50/60Hz ± 2Hz	2)		
rowei	AC 180-250V (50/60Hz ± 2Hz) (option)			
Dower consumption	AC 100V approx. 30VA			
Power consumption	AC 240V approx. 40VA			
	For AC power source: 3.15A	, ,		
Fuse rating	For service outlets: 3.15A			
	All time-lag type			
D 160	Less than 30A at AC100V			
Rush Current	Less than 50A at AC210V			
	Integrated for Analog Input L	ine, Analog Output Line, AC power Line:		
Arrester	Performance: Complies with IEC61000-4-5;			
741100(01	AC power line : Between lines 1kV / Line-Ground 2kV			
Others : Line-Ground 1kV				
Temperature range	-10°C ~ 50°C			
Humidity range	20% ~ 90% RH (non-condensation)			
Mounting method	Wall mounting			
Construction	1P5X (dust-proof)			
Power wiring	Skin top, 9 pcs.			
connection port	'	Compatible cable size: (ϕ 6mm – 12mm, base Hole size ϕ 23mm) x 5		
Case material	(ϕ 9mm – 14mm, base Hole size ϕ 23mm) x 5			
Painting	Melanine resin coating			
Color	Muncell 10YR9.4/0.5			
Weight	Approximately 10kg			
Dimensions	See Chap. 7			
Billionolone	SE040040(WL-04)			
	SE10020(WL-10)			
	SE200020 (WL-20)			
Flow velocity detection	SE104020(PL-10B-20)			
	SE204020(PL-20B-20)			
	SE204014(PL-20B-14)			

5. Necessary straight length of channel

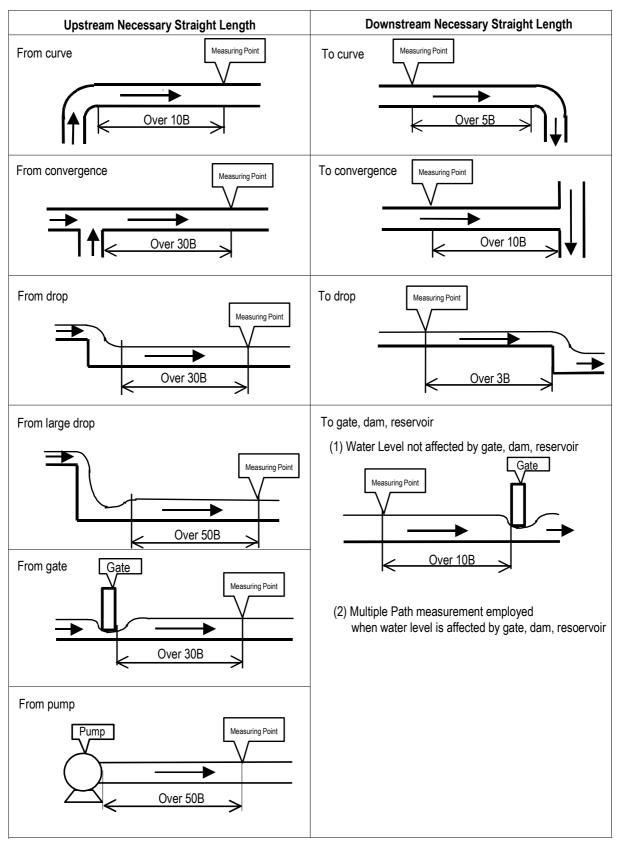


B: channel width

6. Analog output profile

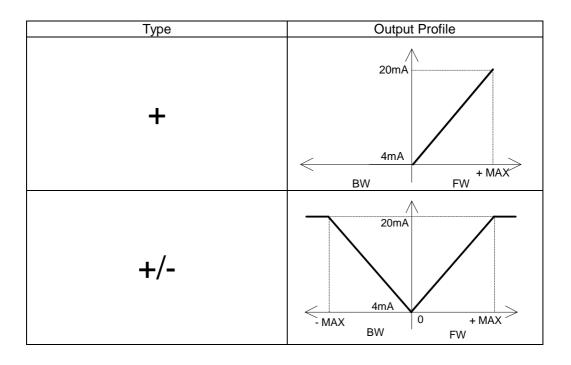


7.Dimensional Drawing

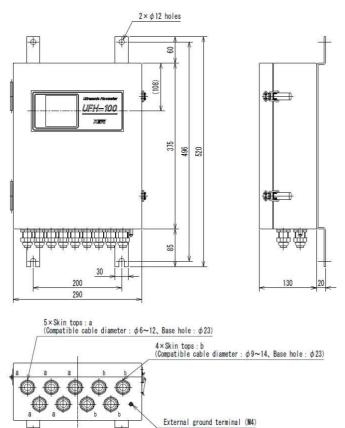




Material: SPCE-SD
Color: Munsell 10YR9.4/0.5
Coating: Melamine resin baking
Construction: JIS C 0920 IP5X (Category2)
Weight: App. 10kg

Main Unit

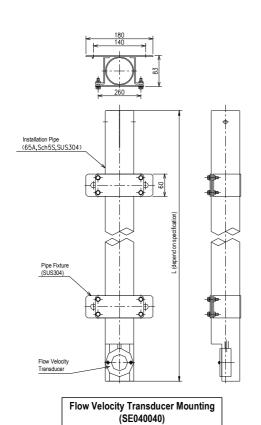


8. Wiring Connection

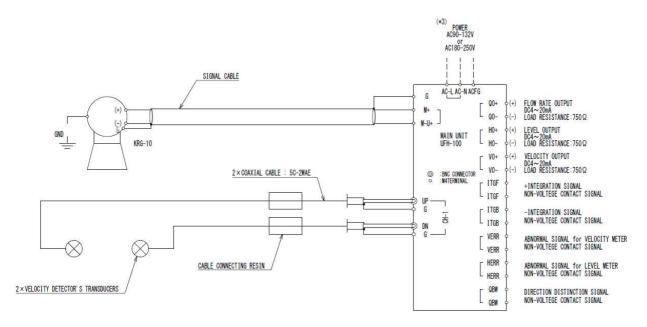

Typical example for 1path system with non-contacting radar KRG-10

9.Installation Example (2-path & 6 inch cone antenna system)

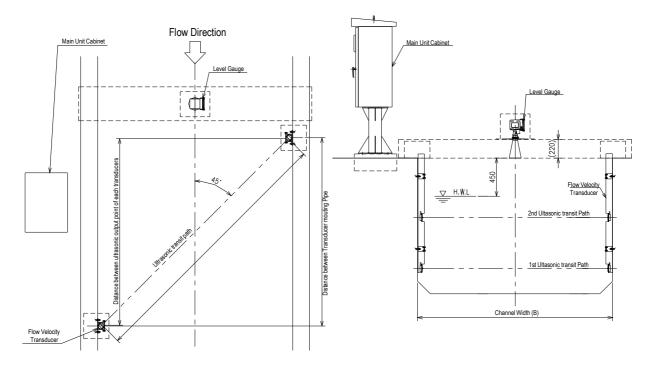

TOKYO KEIKI INC.

2-16-46, Minami-kamata, Ohta-ku, Tokyo 144-8551 Japan

Measurement Systems Company

Phone: +81-(0)3-3737-8664 Fax :+81-(0)3-3737-8665

NOV.2014/PDS009B

Copyright 2014 by TOKYO KEIKI INC. All rights reserved. (Specifications are subject to change without notice.)